






**Part # 69112**  
**Powr-Flo Mass Air Sensor**  
**Installation Instructions**

(Note your application may appear slightly different but installation is generally the same)



1. **Locate stock Mass Air Sensor housing(part of Air Filter housing), loosen clamps, remove filter housing(note: you will not be able to remove completely until after next steps)**

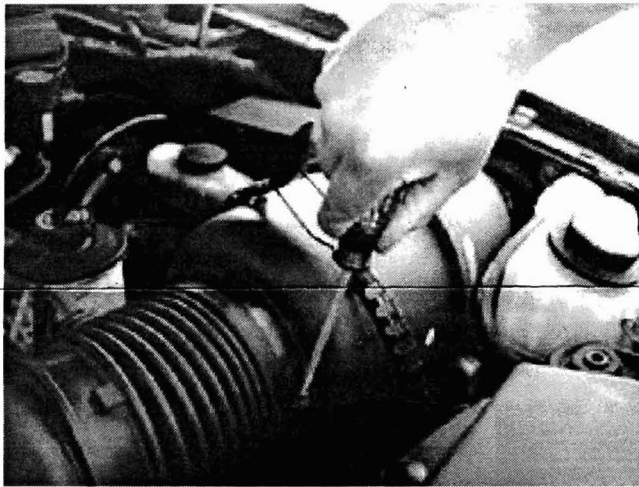



2. **Open Mass Air Sensor Housing and disconnect Mass Air Sensor wiring harness**

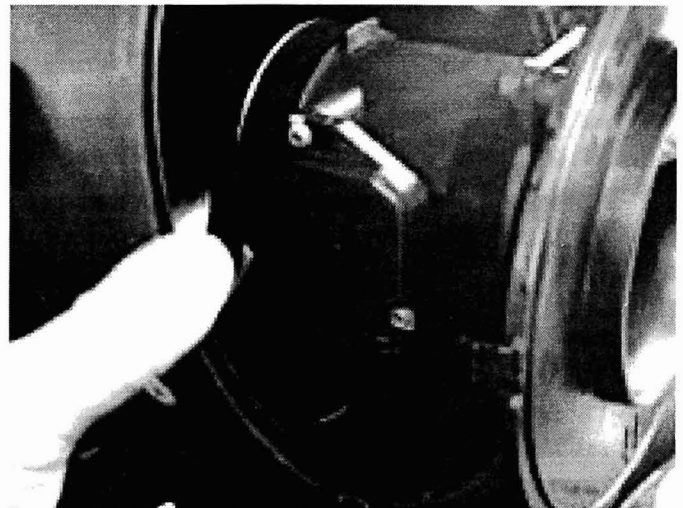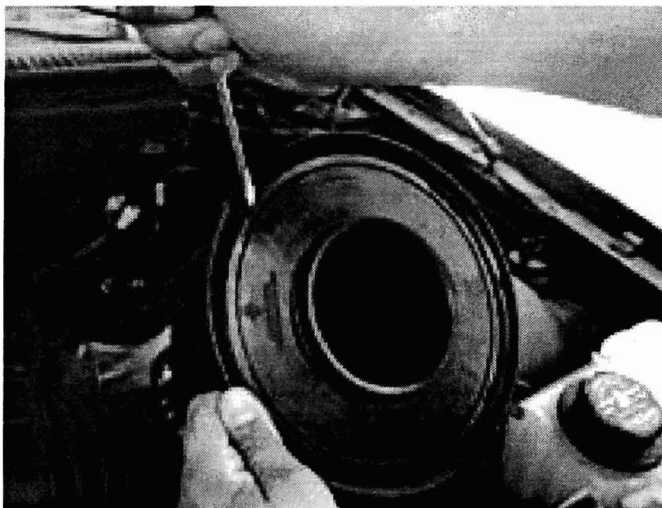

**3. Remove stock Mass Air Sensor and Install Powr-Flo Sensor**

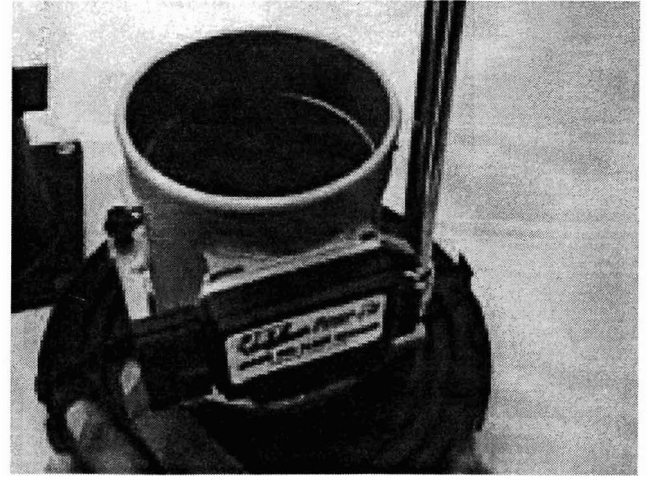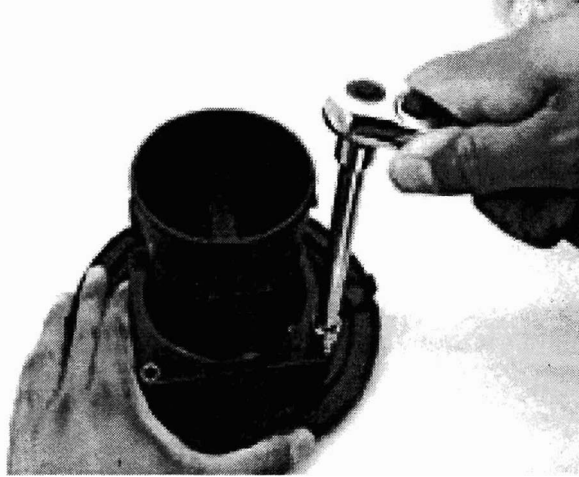

**4. Reinstall into Mass Air Sensor Housing, reconnect wiring harness, close housing, reinstall onto intake, tighten all clamps**

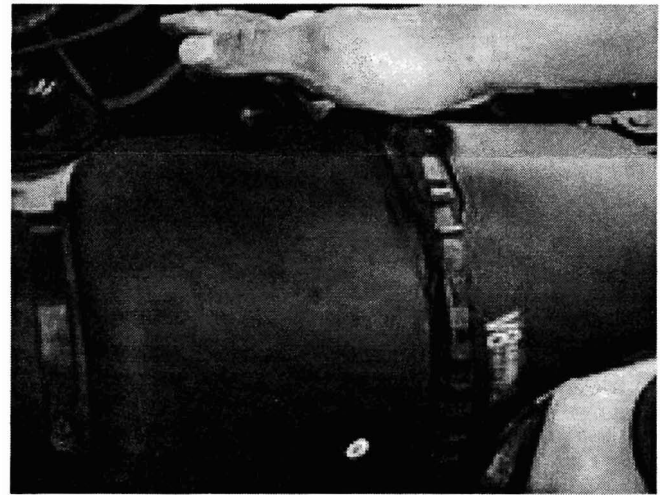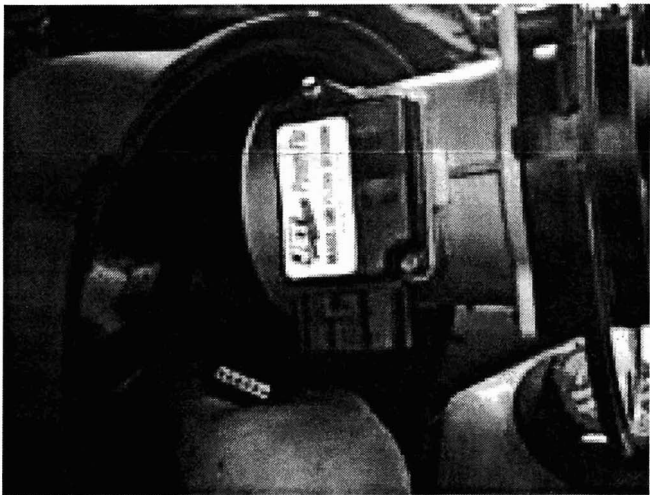

**5. Start vehicle; make sure it runs smooth with no check engine lights**

**6. If check engine light comes on double check installation, make sure wiring harness is fully connected to sensor, if light still comes on reinstall stock sensor and verify that light goes out with stock sensor installed. Then call customer service at 714-848-5515.**

**JET Performance Products  
17491 Apex Circle  
Huntington Beach, CA 92647  
714-848-5515 fax 714-847-6290**